



1. CONNECT TO A REMOTE CONTROL

KOPPLA IHOP MED EN FJÄRRKONTROLL



KOBLE TIL EN FJERNKONTROLL



EINE FERNBEDIENUNG ANSCHLIESSEN




LIITÄ KAUKOSÄÄDIN

1.1

1. Press/tryck/trykk/
paina/drücken
7 sec



2. BLINK BLINK BLINK etc. (15s)

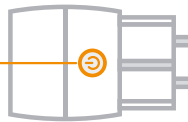

1.2



1. Within/inom/innen/
kulussa/drinnen
15 sec



2. <CLICK, CLICK>



2. CONNECT OUTLET TO TELLDUS LIVE!

KOPPLA UTTAG TILL TELLDUS LIVE!

KOBLE MOTTAKERE TIL TELLDUS LIVE!

Requires a TellStick and a TellDus Live! account

LIITÄÄ VASTAANOTTIMEN TELLDUS LIVE!

EMPFÄNGER MIT TELLDUS LIVE! VERBINDEN

2.1

live.tellDus.com

live.tellDus.com

Control
Devices



2.2

live.tellDus.com

Add a new device



2.3

live.tellDus.com

Add new device wizard

Select your device type:



Secure

433,92 MHz receivers

Group



2.4

live.tellDus.com

Add new device wizard

Select your device brand:

TELLDUS



2.5

live.tellDus.com

Add new device wizard

Select your device model:



Self Learning On/Off

2.6

live.tellDus.com

Add new device wizard

Enter name:

Name:

Window lamp


Next



* Any name may be used/Valgfritt navn/Valgfritt namn/
Nimi on vapaa valinta/Jeder Name kann verwendet werden

2.7

230V~ 50Hz

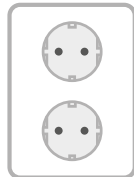

WARNUNG: Nur zur Verwendung inInnenräumen. Spannungsfrei nur mit abgezogenem Stecker. Nicht hintereinander stecken. Nur in trockenen Räumen verwenden. Empfängerkategorie: Klasse 3

2.8

live.tellDus.com

Add new device wizard

1. Install the outlet as explained under "Installation" in the manual.
2. Keep the outlet programming button pressed for 7 seconds. The LED blinks slowly.
3. Press the learn button below within 15 seconds to link the outlet. (The programming mode is automatically disabled if no pairing signal is received.)
4. The connected lamp blinks three times as confirmation.

7 sec



2

Learn

If the pairing fails, repeat steps 2-4 again. The distance to the receiver may have to be shorter when pairing than during ordinary use.

Done

3



2.9

live.tellDus.com

Control
Devices

Window lamp



off

on

FOLLOW US ON SOCIAL MEDIA FOR
EVENTS, OFFERS AND INSPIRATION!



facebook.com/tellDus



@tellDus

INSTRUCTION MANUAL FOR REMOTE CONTROLLED OUTLETS AND REMOTE CONTROL *

Remote controlled outlets & remote control*

- Easy installation.
- Remote control* has 3 channels and 1 group function.
- Each outlet has 5 memory settings.
- The remote control* operates at a distance up to 30 meters (free line of sight).
- Blue LED indicates ON/OFF and programming status.
- The outlets are TellStick compatible.

Installation

1. Remove the small plastic tab from the battery in the remote control*.
2. Connect the outlet to mains power.
3. Connect a lamp to the outlet. If there is a power switch on the connecting cable make sure it is switched on.

Pair a remote control* to an outlet

1. Keep the button on the outlet pressed for 7 seconds. The LED blinks slowly indicating learning mode.
2. Press ON button (1, 2, or 3) on the remote control* within 15 seconds to link the remote control* to the outlet (the learning mode is automatically disabled if no button is pressed within 15 seconds).
3. The connected lamp blinks three times as confirmation.

Unpair a single remote control* from an outlet:

1. Keep the button on the outlet pressed for 7 seconds. The LED blinks slowly.
2. Press the corresponding OFF button on the remote control* to remove the learned code (the learning mode is automatically disabled after 15 seconds if no button is pressed).
3. The connected lamp blinks three times as confirmation.

Unpair all remote controls from an outlet:

1. Keep the button on the outlet pressed for 7 seconds. The LED blinks slowly.
2. Within 7 seconds, press the button briefly once more (the learning mode is automatically disabled after 15 seconds if no button is pressed).
3. The connected lamp blinks three times as confirmation.

ON/OFF operation of a paired outlet

1. Press the ON button on the remote control* to switch on the power.
2. Press the OFF button to switch off the power.
3. Press the GROUP buttons to simultaneously switch all paired outlets ON or OFF.
4. ON/OFF switching is also possible by briefly pressing the button on the outlet.

Specifications

Remote control*:

Item number: 14191
Power supply: 3V CR2032 battery (included)

Outlets:

Item number: 14189
Load on/off function (max.): 3680 W (resistive load)
Operating range: Up to 30 m (free line of sight)
Protection rating: IP20
Protection class: I
Frequency: 433.92 MHz
Power supply: 230 V~, 50 Hz
Standby power: <1 W
Ambient temperature: 0°C–35°C

WARNING!

DO NOT OVERLOAD THE OUTLETS! Please note that you should always allow for a safety margin, especially if the load is not resistive. Do not use the outlets in humid places, e.g. basements and not in the vicinity of inflammable liquids, solvents, paint, or similar products.

* Remote Control only included in selected packages.

ANVÄNDARMANUAL FÖR FJÄRRSTYRDA UTTAG OCH FJÄRRKONTROLL*

Fjärrstyrda uttag & fjärrkontroll*

- Enkel installation.
- Fjärrkontrollen* har 3 kanaler och 1 gruppfunktion.
- Varje uttag har 5 minnesplatser.
- Fjärrkontrollens* räckvidd är upp till 30 meter (fri sikt).
- Blå lysdiod indikerar på/av och inlärningsstatus.
- Uttagen är TellStick-kompatibla.

Installation

1. Ta bort den lilla plastfliken från batteriet i fjärrkontrollen*.
2. Anslut uttaget till ett eluttag.
3. Anslut en lampa till uttaget. Om det finns en strömbrytare på lampans kabel, kontrollera att den är påslagen.

Lär upp ett uttag med en fjärrkontroll*

1. Håll knappen på uttaget intryckt i 7 sekunder. Lysdioden blinkar långsamt indikerande inlärningsläge.
2. Tryck på ON-knappen (1, 2 eller 3) på fjärrkontrollen* inom 15 sekunder för att koppla fjärrkontrollen* till uttaget. (Inlärningsläget avaktiveras automatiskt om ingen knapp trycks in inom 15 sekunder.)
3. Den anslutna lampan blinkar tre gånger som bekräftelse.

Ta bort en inlärd fjärrkontroll* från ett uttag:

1. Håll knappen på uttaget intryckt i 7 sekunder. Lysdioden blinkar långsamt.
2. Tryck på kopplad OFF-knapp på fjärrkontrollen* för att ta bort den lärda koden. (Inlärningsläget avaktiveras automatiskt efter 15 sekunder om ingen knapp trycks in.)
3. Den anslutna lampan blinkar tre gånger som bekräftelse.

Ta bort alla inlärd fjärrkontroller från ett uttag:

1. Håll knappen på uttaget intryckt i 7 sekunder. Lysdioden blinkar långsamt.
2. Inom 7 sekunder, tryck kort på knappen en gång till. (Inlärningsläget avaktiveras automatiskt efter 15 sekunder om ingen knapp trycks in.)
3. Den anslutna lampan blinkar tre gånger som bekräftelse.

På/av-styrning av ett upplärt uttag

1. Tryck på ON-knappen på fjärrkontrollen* för att slå på strömmen.
2. Tryck på OFF-knappen för att stänga av strömmen.
3. Tryck på GROUP-knapparna för att samtidigt styra alla parade uttag på eller av.
4. På/av-styrning är också möjlig genom att kort trycka på knappen på uttaget.

Specifikationer

Fjärrkontroll*:

Artikelnummer: 14191
Strömförsörjning: 3V CR2032 batteri (inkluderat)

Uttag:

Artikelnummer: 14189
Max belastning: 3680 W (resistiv last)
Räckvidd: Upp till 30 m (fri sikt)
Kapsling: IP20
Skyddsklass: I
Frekvens: 433,92 MHz
Strömförsörjning: 230 V~, 50 Hz
Standby-förbrukning: <1 W
Användningstemperatur: 0°C–35°C

VARNING!

ÖVERBELASTA INTE UTTAGEN! Tänk på att alltid ha en säkerhetsmarginal, speciellt om lasten inte är resistiv. Använd inte uttagen på fuktiga ställen, t.ex. i källare och inte i närheten av brandfarliga ämnen, lösningsmedel, färg eller liknande produkter.

* Fjärrkontroll ingår endast i utvalda paket.

Correct disposal of the products



Within the European Union, this symbol indicates that the products must not be disposed in the household waste. Devices contain valuable recyclable materials that should be recycled for reuse and uncontrolled waste disposal may cause harm to the environment and human health. Please dispose the old products via suitable collection systems or send the unit to the office where you bought it. This will make the product recycling.

TELLDUS® | LIVE SMARTER

TellDus Technologies AB, Kabelvägen 7, 311 50 Falkenberg, Sweden
www.telldus.com • support.telldus.com